

GluDown, Inc. Phone: (214) 504-2503 Fax: (972) 833-1012 www.gludown.com

Vertical Drainage Board Installation – Anchor Bonding Method

Technical Bulletin September 2018

Issue: Waterproofing drainage boards installed vertically using traditional bonding methods are susceptible to adhesive failure and falling down over time. This issue can be enhanced at high temperatures and can occur regardless of the type of waterproofing membrane.

Recommendation: Use the Anchor Bonding Method to increase bond strength and prevent adhesive failure.

Anchor Bonding Method


Step 1: Lay out drainage board to be installed. 4 to 6 inches (6 to 9 dimples) below what will be the top of the drainage board cut only the plastic core from one side to the other with a utility knife. Do **not** cut through the fabric.



Step 2: Remove the top 4 to 6 inches (6 to 9 dimples) of plastic core exposing the fabric.




Step 3: Apply a full coat (80%-100% coverage) of adhesive across at least the top 4 to 6 inches of the membrane where the drain board will be installed. Use a frame and fill pattern to apply adhesive to the rest of the membrane.

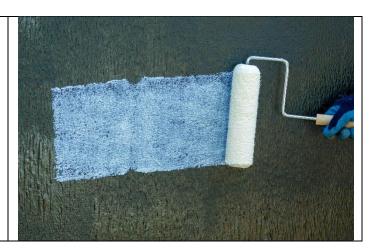

Step 4: When the adhesive is ready, align the top 4 to 6 inches of exposed fabric on the drain board with the top 4 to 6 inches of full coverage adhesive on membrane. Apply heavy pressure to compress the fabric into adhesive. This area will act as the anchor for the board.



Step 5: Working from the top down, apply heavy, uniform pressure to compress the drain board into the adhesive. Be sure to also compress the fabric on the sides of the board into the adhesive. Fabric and plastic core should exhibit a strong initial bond to the adhesive.

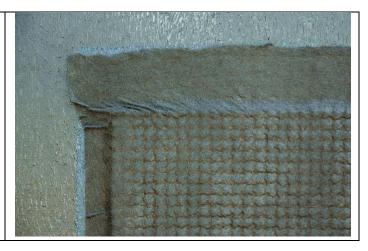

- Backfill exposed areas as soon as possible to prevent damage to the waterproofing materials.
- The same steps can be used for the bottom of the board to prevent curling up.
- This method can also be used on film backed drainage boards.

A video demonstrating the Anchor Bonding Method can be seen at: www.youtube.com/gludown

| Precautionary Information | Refer to Product Label and Safety Data Sheet for health and safety |
|---|--|
| , | information before using this product. For additional health and safety |
| | information, call (214) 504-2503. |
| Technical Information | The technical information, recommendations and other statements |
| Teennear mormation | contained in this document are based upon tests or experience that |
| | GluDown, Inc. believes are reliable, but the accuracy or completeness of |
| | such information is not guaranteed. |
| Product Use | Many factors beyond GluDown Inc.'s control and uniquely within user's |
| Troduct osc | knowledge and control can affect the use and performance of a GluDown, |
| | Inc. product in a particular application. Given the variety of factors that |
| | can affect the use and performance of a GluDown, Inc. product, user is |
| | solely responsible for evaluating the GluDown, Inc. product and |
| | determining whether it is fit for a particular purpose and suitable for |
| | user's method of application. |
| Warranties and Disclaimer | GLUDOWN, INC. MAKES NO WARRANTIES, EXPRESS OR IMPLIED, |
| | INCLUIDNG, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF |
| | MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. User is |
| | responsible for determining whether the product is fit for a particular |
| | purpose and suitable for user's method of application. Please remember |
| | that many factors can affect the use and performance of any adhesive in |
| | a particular application. Given the variety of factors that can affect the use |
| | and performance of a GluDown, Inc. product, some of which are uniquely |
| | within the user's knowledge and control, it is essential that the user |
| | evaluate the product to determine whether it is fit for a particular purpose |
| | for the user's method of application. |
| Limitation of Remedies & Liability | If the GluDown, Inc. product is proved to be defective, THE EXCLUSIVE |
| | REMEDY, AT GLUDOWN, INC.'s OPTION, SHALL BE TO REFUND THE |
| | PURCHASE PRICE OF OR TO REPAIR OR REPLACE THE DEFECTIVE |
| | GLUDOWN, INC. PRODUCT. GluDown, Inc. shall not otherwise be liable for |
| | loss or damages, whether direct, indirect, special, incidental, or |
| | consequential, regardless of the legal theory asserted, including, but not |
| | limited to, contract, negligence, warranty, or strict liability. |